

Co-botic 1900 software change instructions

From drop & go software to docking software

09-03-2026



1. Press the schedule button on the remote controller (bottom right red square). The scheduled time will start to flash. Then set the time to 01:15. When the time is set press the schedule button again and the time will stop flashing.



2. Press and hold the play/pause button on the co-botic 1900 machine to turn the machine on. When the power on voice prompt plays, press and hold the play/pause button continuously. Once you hear a beep, press the forward button on the remote control. Release the play/pause button after hearing a voice prompt that the device has entered settings mode.
3. Press the schedule button, after hearing a beep, press it again to exit the flashing scheduling time mode. From here there are two options;
 - Press the left button on the remote control to configure as drop and go software
 - Press the right button on the remote control to configure as docking station software
4. When the voice message plays the software is successfully changed, restart the unit by pressing and holding the play/pause button to turn off and after that the device can be used as normal.